



## Snap Sampling Operating Instructions

### Operating Instructions - Snap Sampler Inserting and securing bottles



A



B



C



D

- A. Insert 40ml VOA into top of 40ml Snap Sampler
- B. Insert 125ml or 350ml POLY into back side of 125ml Snap Sampler
- C. Slide twist-on 'Connector' over sampler and twist clockwise to seat. The word 'Front' should appear above the blue release pins.
- D. Gently secure connector with blue set screw.
- E. Set all Bottom Snap Caps first, then Top Snap Caps. Insert Snap Driver blade into the upper hole of the concave side of Snap Cap; align driver over the release pin that you will set the Snap Cap.
- F. Push down on Snap driver handle to lift Snap Cap; grasp driver or use thumb to push driver down; keep fingers clear of the under-side of the driver tool.
- G. Pivot on the notch in the driver handle until driver handle is flush/parallel with sampler body and Snap Cap is in its seat.
- H. Push release pin up through lower hole in the Snap Cap; repeat E. through H. for each Snap Cap and all Samplers.

### Setting Snap Caps



E



F



G



H




## Snap Sampling Operating Instructions


### Attaching Manual Trigger



A

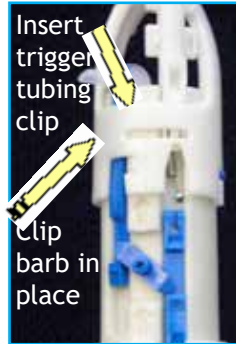

B

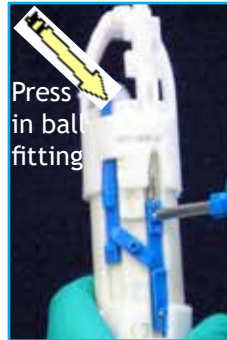

C



D

E

- A. Insert trigger in right/upper release pin groove - feed ball fitting first.
- B. With **trigger barb facing out**, insert trigger until barb **clicks** into position.
- C. Press ball fitting into release pin using Snap Driver Tool.
- D. Attach safety cable tie.
- E. Trim protruding Snap Caps between ribs (required for smaller diameter wells). Where more than one sampler is attached to one trigger, **connect ball-end connector cables between each sampler** (not shown).
- F. Lower Sampler to depth; seat trigger clip into ramp on | Dock Ring.
- G. Close and lock well cap.
- H. To sample, **pull trigger cable while holding Dock Ring in place**; remove trigger from dock and retrieve samplers.



F



G



H

Slip trigger clip onto Dock Ring. Dock Ring 'ramp' should face upward