

HAND-PENETROMETER FOR TOP LAYERS, TYPE IB

OPERATING INSTRUCTIONS

On this manual

This manual covers the following subjects:

1. Description
2. Calculation of the cone resistance
3. Maintenance



If the text follows a mark (as shown on the left), this means that an important instruction or an action to be executed follows.

1. Description

The hand penetrometer for top layers is an instrument for indicative measurement of the resistance to penetration of the top layers. For more accurate measurements we advise the use of the penetrolgger.

The principle of the hand penetrometer is dependant upon measuring the highest penetration resistance against a cone in a top layer over a trajet of approx. 10 cm. An appropriate cone (6), according to the penetration resistance expected, is screwed to the corresponding probing rod (5). The probing rod is attached to the necessary extension rod (4) which in turn is screwed into the penetrometer (1).




All components must be tightly screwed together, using the tools supplied, to prevent the screw threads becoming clogged with soil.

The required compression spring is placed in the penetrometer (1) by unscrewing the screws (3) one turn with the supplied hexagonal wrench, the interior can be removed. The required compression spring can be placed inside. The indicator ring (2) must be set at the zero position when measuring commences. The cone is now pushed, with one hand only, at right angles into the soil layer to be investigated at a constant pressure of approx. 2 cm per sec.

The indicator ring now moves to a position that shows the maximum compression of the spring on the mm scale of the penetrometer. Horizontal measuring is possible, in a profile pit for example, by using one short extension rod (4). Two extension rods with connection nut (7) are mainly used for the normal top layer penetration. The choice of cone, compression spring and extension rod is dependant upon the type of soil and the expected penetration resistance. A compression spring 50 N and a large cone 0.5 cm² are necessary when investigating loose soils. For more accurate results in a harder and more compact soil the compression spring 150 N and cone 0.25 cm² must be used.

The compression springs are distinguished by color and the diameter:

Spring 50 N:	small (Ø 1.4 mm)	no marking
Spring 100 N:	middle (Ø 1.6 mm)	blue marking
Spring 150 N:	large (Ø 1.75 mm)	red marking

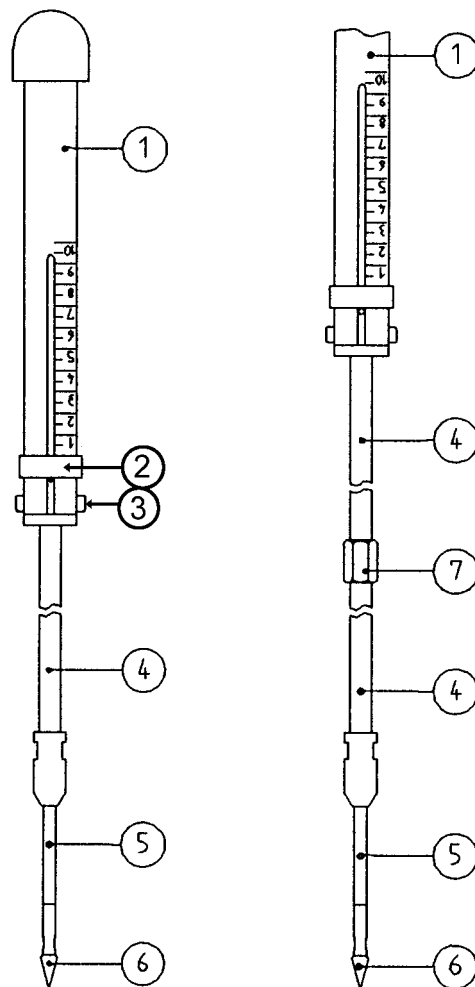

All it takes for environmental research

P.O. Box 4, 6987 ZG Giesbeek,
the Netherlands

T +31 313 88 02 00
F +31 313 88 02 99

E info@eijkelkamp.com
I www.eijkelkamp.com



2. Calculation of the cone resistance

Calculation of the cone resistance is as follows:

$$\text{Cone res. (N/cm}^2\text{)} = \frac{\text{Total force (pressure(cm) x spring compression (N/cm))}}{\text{cone surface area (cm}^2\text{)}}$$

With a chosen combination and cone, the factor:

$$\frac{\text{spring compression (N/cm)}}{\text{cone surface area (cm}^2\text{)}}$$

will remain constant (= constant factor).

Only the compression of the spring, indicated by the indicator ring, outside the penetrometer is variable. This compression, calculated together with the constant factor gives the cone resistance. The strength of the spring, as indicated, applies to the maximum compression of 10 cm. Therefore this reduces by a value of 10 cm. E.g. with a spring pressure of 150 N and a cone of 0.25 cm² the constant factor will be 15.0 / 0.25 = 60.0

The constant factors applicable to the various spring-pressures and cones are indicated in the following table:

	Cone	0.25 cm ²	0.5 cm ²
Spring pressure			
50 N (5 kgf)		20	10
100 N (10 kgf)		40	20
150 N (15 kgf)		60	30

Example: Spring pressure 50 N; cone 0.5 cm²; reading 8.2 cm.
Cone resistance = 8.2 x constant factor = 8.2 x 10 = 82 N/cm².

To convert into kg/cm²: 10 N/cm² = 1 kg/cm², than 82 N/cm² = 8.2 kg/cm²

3. Maintenance



Keep the equipment clean and dry.



Wear of the cones is unavoidable with constant use. The diameters of the cones must be: 0.5 cm² = 8 mm and 0.25 cm² = 5.6 mm. A reduction of 5 %, i.e. with a diameter of 7.6 and 5.3 mm, means that the cones must be replaced



The compression springs must be replaced, if it is suspected that false values are indicated. An indicative check of the springs can be done by pushing the springs to the maximum on a appropriate balance and compare the value with the original values as stated above (resp. 5,

Nothing in this publication may be reproduced and/or made public by means of print, photocopy, microfilm or any other means without previous written permission from Eijkelkamp Agrisearch Equipment.

Technical data can be amended without prior notification.

Eijkelkamp Agrisearch Equipment is not responsible for (personal damage due to (improper) use of the product.

Eijkelkamp Agrisearch Equipment is interested in your reactions and remarks about its products and operating instructions.