





QUICK START GUIDE: LEL Personal Protection Monitor

This guide is meant to serve as a quick reference for operating the LEL Personal Protection Monitor. It is for your convenience and is not intended to replace the information found in an Operations Manual.



To bump test

- Fit regulator to calibration gas bottle make sure the gas is the H₂S, CO, CH₄, O₂, N₂ mix.
- Hold down the left enter button for two seconds
- Allow LEL to run through two screens (LEL info and time & date)
- Select Yes to begin bump test
- Select No to disable the pump for the duration of the pump test (to choose direct flow)
- Allow sensor check to run through until you get four ticks
- Now it is time to apply the gas (you have a 60 second time window)
- Wait for four ticks again.
- Select Yes when asked to confirm alarms.
- LEL will confirm bump test pass.
- Disconnect gas by turning off at the valve and removing the regulator from bottle

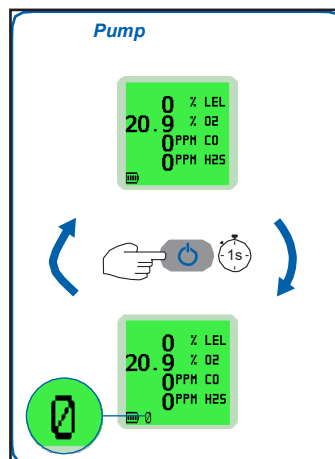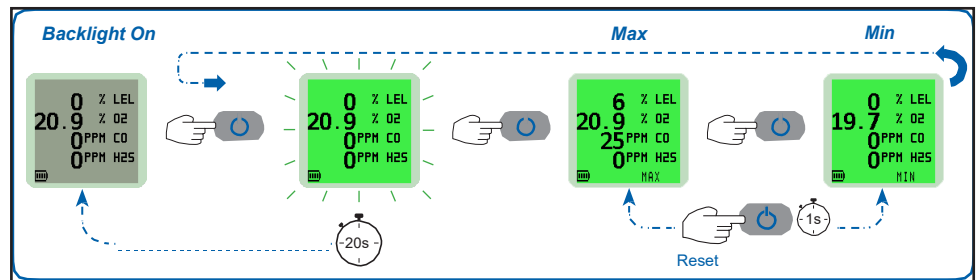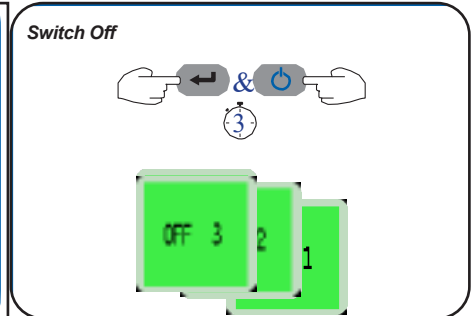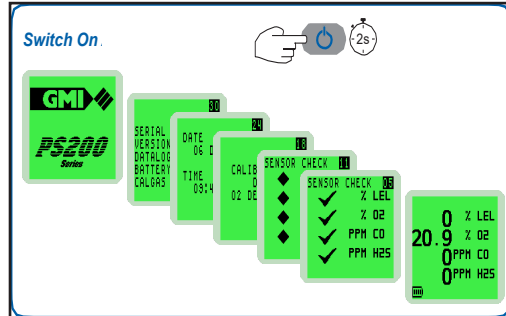


Manual Datalog



Self Test



Charging

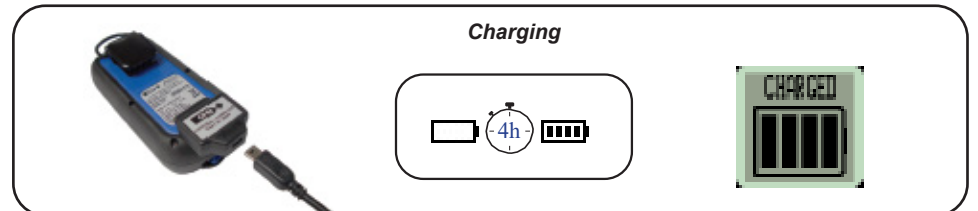

Alarms



Alarm Acknowledge

