


QUICK START GUIDE: Van Veen Grab

This guide is meant to serve as a quick reference for operating the Van Veen Grab.

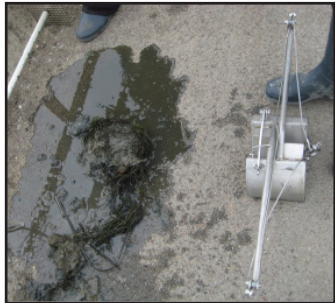

System Operation

1. For taking disturbed samples from the base of lakes, streams, rivers etc.
2. At surface of sample site, open jaws of grab & secure with hook
3. Deploy grab gently & steadily into water to ensure hook remains in position
4. When the grab reaches the bottom, jaws will automatically open.
5. Size of sample will depend on compactness of sediment & weight of grab (all Van Veen Grabs are weighted)
6. We recommend you take a minimum of 6 samples to base your conclusions on the total of all the samples from an area
7. Raise the grab slowly
8. On surface empty the grab to investigate contents
9. Clean stainless steel grab.

Scan to download the video

