



## Snap Sampling Operations Instructions

### Operating Instructions - Snap Sampler Bottle Preparation 40ml VOA Trim Snap Caps



A



B




C

- A. Snap Sampler VOA, removed from Snap Sampler.
- B. [UNPRESERVED] Carefully trim Snap Caps as flush as possible. To trim first Snap Cap, hold ends with finger and thumb; clip carefully - making sure not to dislodge seal. Carefully screw on first septa cap. Trim second Snap Cap; **clip carefully - making sure not to dislodge seal**; screw on second septa cap, then re-tighten both septa caps to secure.
- C. Prepared, unpreserved bottle.
- D. [PRESERVED] After securing the first end of the Snap Cap, trim the second Snap Cap; add 2-3 drops of preservative to the cavity in the Snap Cap.
- E. [PRESERVED] Pierce the Snap Cap membrane with the pointed end of the DRIVER Tool to allow preservative to mix with the sample; add preservative to form a meniscus, then secure the second septa cap.
- F. Prepared, preserved bottle.

### Add Preservative (as required)



D

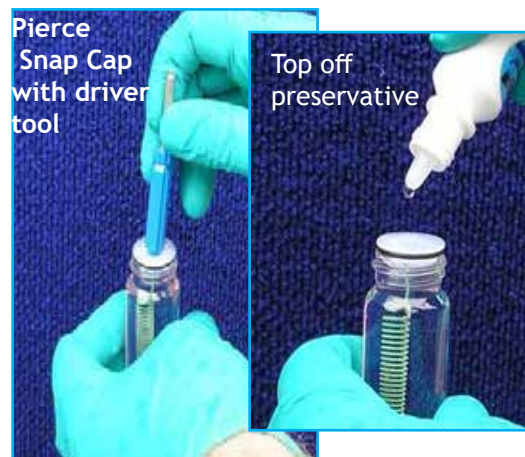

E



F

